


Socketed STOP THAT BALL!™

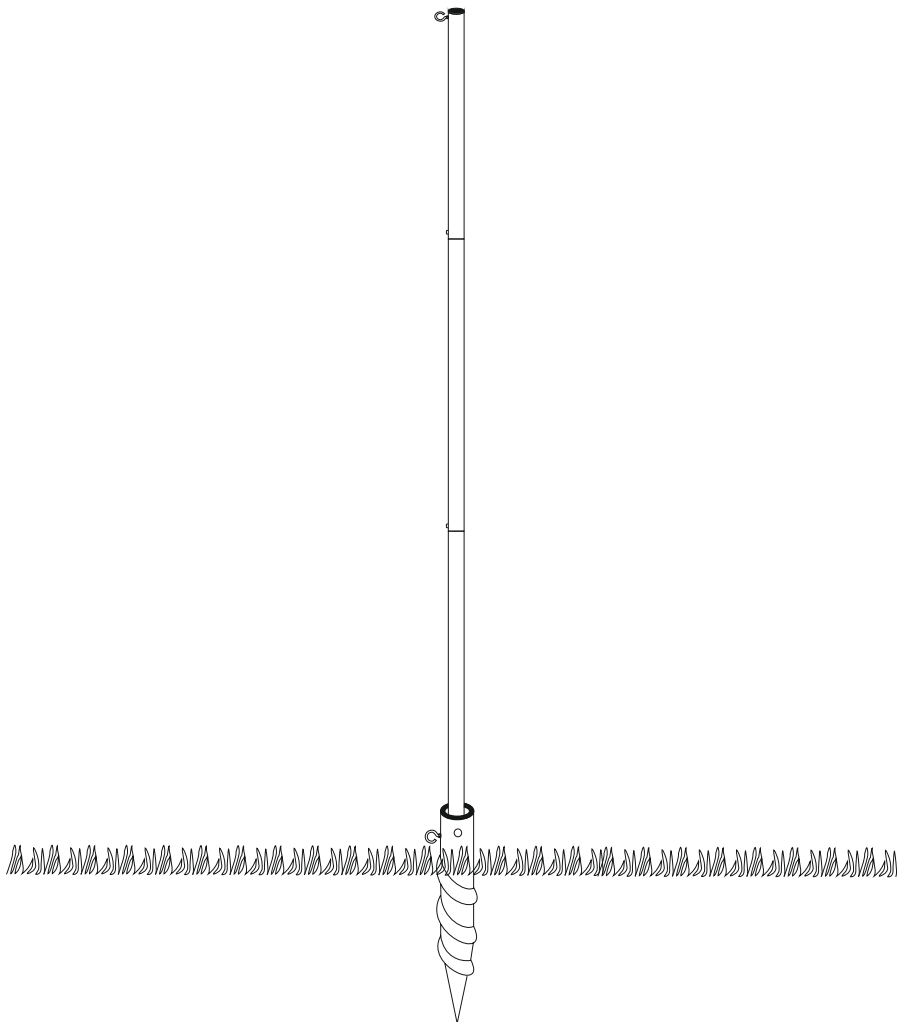









NET WORLD SPORTS»

Net World Sports UK
www.networldsports.co.uk
sales@networld-sports.co.uk
+44 (0) 1691683807

Net World Sports USA
www.networldsports.com
sales@networld-sports.com
1-866-861-9095

PARTS LIST


PART	COMPONENT	QTY
1.		2.
2.		1.
3.		1.
4.		1.
Socket cap		1.
Cap.		1.
Spacer		1.
winding tool		1.

Warning


1. Check all parts for defects before assembly.
2. Beware of over head cables when assembling this product.
3. we recommend removing net and poles in high winds and extreme weather conditions.
4. Do not swing or climb on poles.

Assembly Instructions

Step 1. assemble the parts 1 and 2

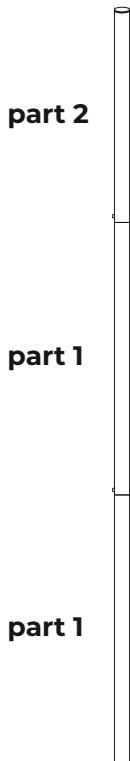


Step 2. secure hook (part 4) to part 2 and insert cap.

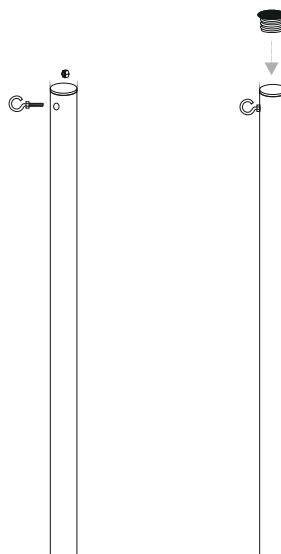

Step 3. Mark out the position of the poles, we recommend poles are no more than 3 metres apart.

Using the winding tool screw the ground socket (part 3) into the ground

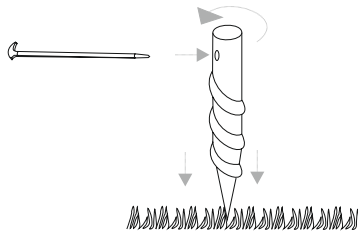

Step 4. Once the ground socket is installed fit spacer into the socket and then the assembled pole. then screw in the hook against the pole to secure. Attach net to hooks at the top and bottom of the pole.

